DENLER®

SMART DOOR LOCK

USER MANUAL

MODEL - DL10v1

Scan the QR Code to register your product
for hassle-free warranty services.

IMPORTANT NOTE :

We recommend to keep at least 1 mechanical key outside
your home. So, in case of emergency, you will be able to unlock the smart lock.
This is helpful when battery is completely drained out or any kind of electronic failure.

Product Dimensions

Lock Elements

Product Specifications

Parameter	Description
Model Name/No.	Denler DL01v1
Material	Aluminium Alloy
Lock Weight	4.5 Kg
Unlocking Features	Mobile App, Fingerprint, PIN, RFID Card, Mechanical Key
Color	Copper & Black / Black & Grey
Wi-Fi Network	2.4Ghz (5Ghz not supported)
Suitable Doors	Wooden / Metal
Power Supply	DC 7.4V 4200 mAh Li-ion rechargeable batteries
Required Door Thickness	35-100mm
Data Capacity	50 Fingerprints, 50 PIN, 50 RFID Cards
Working Temperature	-10°C to 55°C
Working Humidity	0-95%

Keypad Functions

Touch for a second to wake up keypad and turn on keypad backlit to give inputs.

* Cancel, Return & Exit

Doorbell & mobile app unlocking request. Also acts as a “Confirm” or “Done” button when in setup mode

Lock Setup Menu

NOTE : While accessing the lock menu ***** button works as a BACK button and **#** works as a ENTER button.

Adding Admin user

(If using the lock for the first time after installation & No admin added before)

Touch the keypad to wake up lock, press "***#**" then voice prompt will ask to admin password. Enter "**123456 & #**" default password. Enter the Admin password you want to set. and press #.

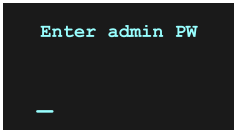

After successfully adding Admin User you will see system menu. Select "**1.New User**" by touching number **"1**" on keypad.

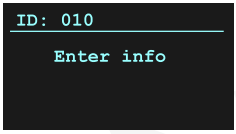

On the next screen you will see Enter info. Here you can enter 6-digit PIN, Touch RFID Card near card icon on the keypad or Touch the fingerprint to add new user. (While adding fingerprint touch various areas of thumb on fingerprint sensor as per voice prompt, do not swipe the finger) Press ***** multiple times until you go back to menu

Adding user

(To add other users, make sure you have created admin user first as mentioned above)

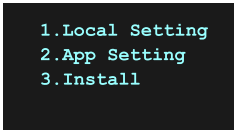

Enter ***#** then admin password # to enter lock menu. Then select **"1"** to enter Lock Function

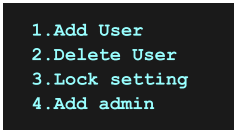

From the menu select option **"1"** to add Fingerprint, Password or Card.

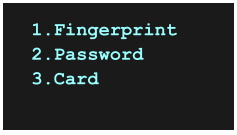

Select option 1 to add Fingerprint, 2 for password and option 3 to add cards.(While adding cards, don't swipe the card on lock simply tap it on the card icon on the keypad.)

Deleting User

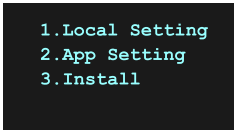

Enter ***#** then admin password # to enter lock menu. Then select **“1”** to enter Lock Function

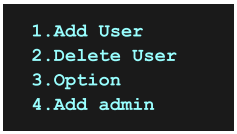

From the menu select option **“2”** to delete user.

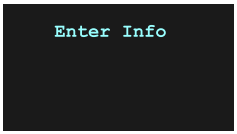

On this screen, enter the user ID and confirm by pressing “**#**”

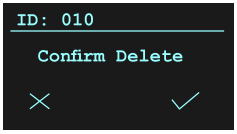

NOTE : In case of temporary user like Maid, remember the User ID while adding fingerprint or PIN. So, you can delete this user even when user is not present at the time of deletion. You can directly delete user with the help of user ID. Else, you have to delete all the user and add again.

Volume Setup

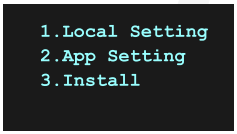

Enter ***#** then admin password # to enter lock menu. Then select **“1”** to enter Local Setting

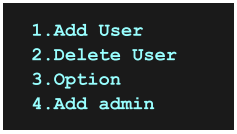

Select option **“3”** to enter Option.

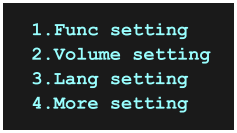

Select **“2”** to enter Volume Setting. To increase the volume press **“1”** and to decrease press **“2”**

Door/Motor Direction Setup

IMPORTANT NOTE : Door direction setup is only require if lock bolts are coming out when **OPEN** button is pressed & going inside when **CLOSE** button is pressed. OPEN • CLOSE This button is located on the inner unit right above the handle.

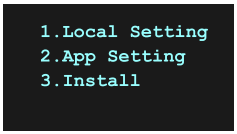

Enter ***#** then admin password # to enter lock menu. Then select **"3"** to enter Install

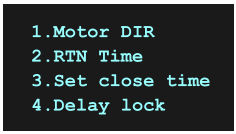

Selection option **"1"**

Press **"1"** to select forward and press **"2"** to select reverse.

Factory Reset

IMPORTANT NOTE : Factory reset will delete all the user data including fingerprints, face, RFID cards, PINS. Your lock will get disconnected from you Wi-Fi network and mobile app as well. You have to reconfigure all the settings after factory reset.

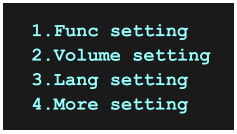

Press "***#**" then provide admin fingerprint/password **#**.
Select **2.Lock Function** -> then select **4.More setting**

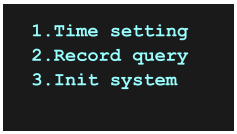

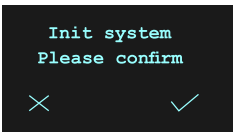

In More setting menu. Select option **3.Init system** then it will ask for confirmation. Press **#** to confirm & press ***** to cancel.

IMPORTANT NOTE : Distance between Smart Lock and Wi-Fi router should be less than 15 feet. Make sure your Smartphone is connected with 2.4Ghz Wi-Fi network only (Does not support 5Ghz Wi-Fi Network). Location/GPS and Bluetooth is turned ON.

GET IT ON Google Play

Download on the App Store

Downloading & Installing App

Scan the QR code to download and install mobile app or you can search for "Smart Life - Smart Living" mobile app in Google Play Store or App Store

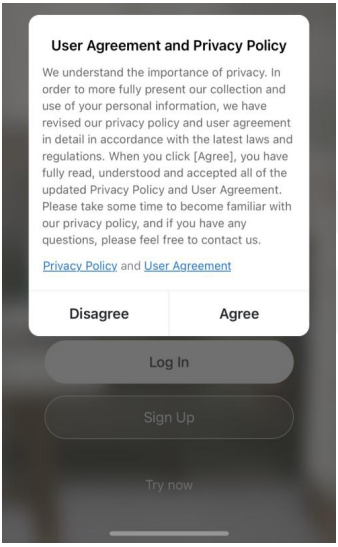

Register/Sign Up

1. Click "Sign Up" and read the privacy policy and click "Agree" and enter the registration page.

2. Enter valid email id to receive verification code. The country /region of the app will be same as the phone's. You can change it by yourself when registering (Cannot be changed after registration is completed).

3. Enter the verification code received on email id and proceed to password setting page. Set your password as required and click "Done" (Remember your email and password used for mobile app)

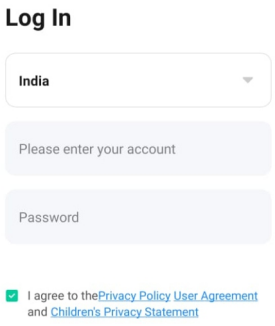

Log In

1. After successful registration now you can login to your Smart Life account by entering registered email ID and password.

2. You can also login to smart life app with use of your existing gmail account by pressing google icon located at the bottom of login screen.

Mobile App Setup

STEP - 1 Press “* #” then admin password # on smart lock number keypad the select option “2” app settings then option “1” add module, this will turn on pairing mode on lock with mobile app.

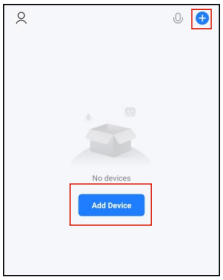

STEP - 1
Click “Add Device” or “+” icon

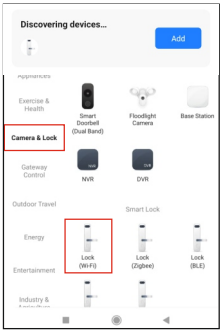

STEP - 2
Select “Camera & Lock” then click “Lock(Wi-Fi)

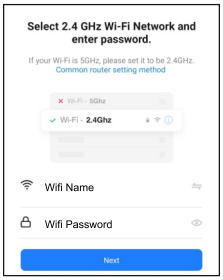

STEP - 3
Enter your Wi-Fi Network details & click “Next”

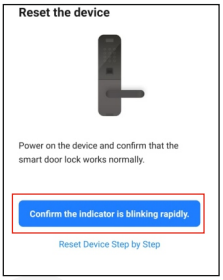

STEP - 4
Click “ Confirm the indicator is blinking rapidly”

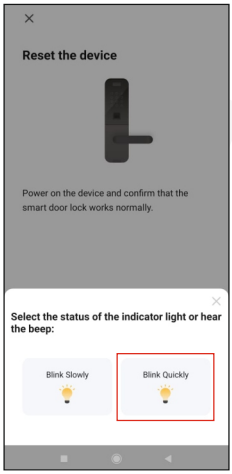

STEP - 5
Click “Blink Quickly”

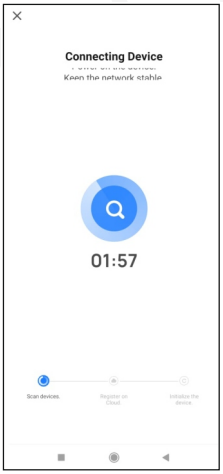

STEP - 6
App will start searching for smart lock in network

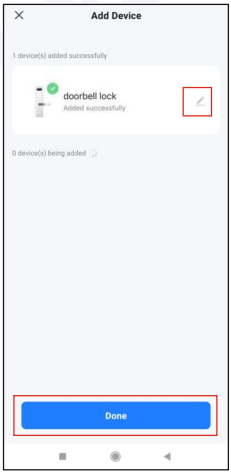

STEP - 7
After successfully connection, lock will prompt “ Successful”

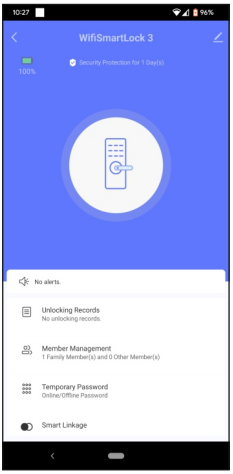

STEP - 8
Now you can manage features through mobile app

Remote App unlocking & Video intercom

NOTE :

1. Make sure all app permissions are given to smart life app else it will not notify any update in the notification bar or generate any sound notification.

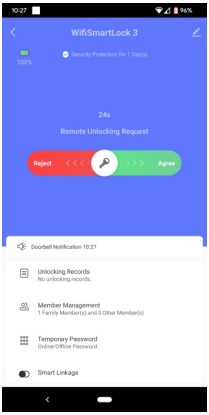

1. When a visitor touches icon on smart lock, you will be notified on mobile app.
2. When you click on notification, you can see the screen as shown in screenshot on the left.
3. You can swipe right to unlock the lock or swipe left to reject unlocking request.

Online password function

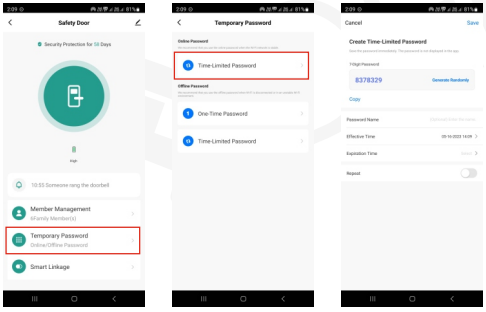

1. When a visitor visits your Office/Home, you can generate temporary password with valid time period.
2. You can also check unlocking records in the app.

Online password is recommended if you have stable 24x7 Wi-Fi network connection.

Offline password function

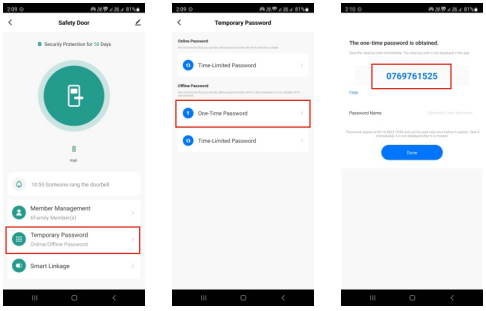

1. One-time password will be valid for 6 Hours. Works only once within 6 Hours.
2. Time-Limited password will be valid for 24 Hours. Can be used multiple times during 24 Hours.

Offline password is recommended if you have unstable Wi-Fi network connection.

DENLER®